

Relays
Relays in the engine compartment

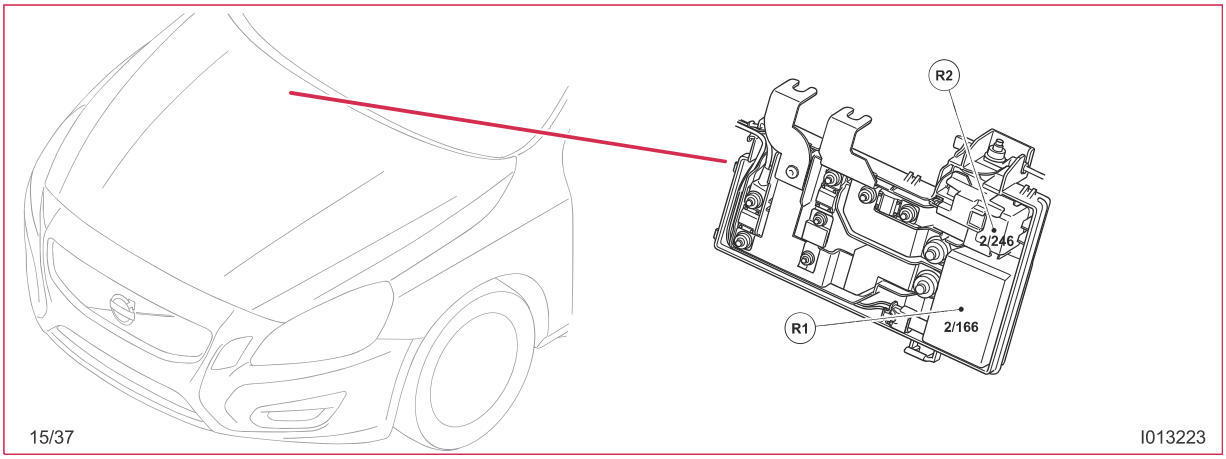

15/37 Distribution box in cold zone engine compartment


Pos	Relay function	
R1	2/166	Battery relay
R2	2/246	Secondary battery relay

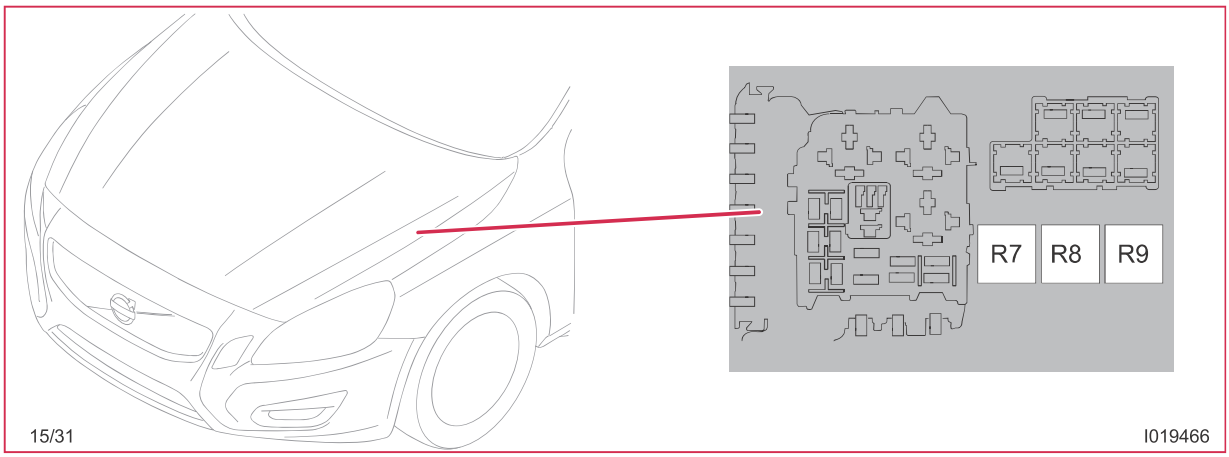

15/31 Distribution box in engine compartment


Pos	Relay function	
R7	2/31	Relay, 15-feed
R8	2/17	Relay, horn
R9	2/182	Relay, headlight washer motor

Relays
Relays in the engine compartment

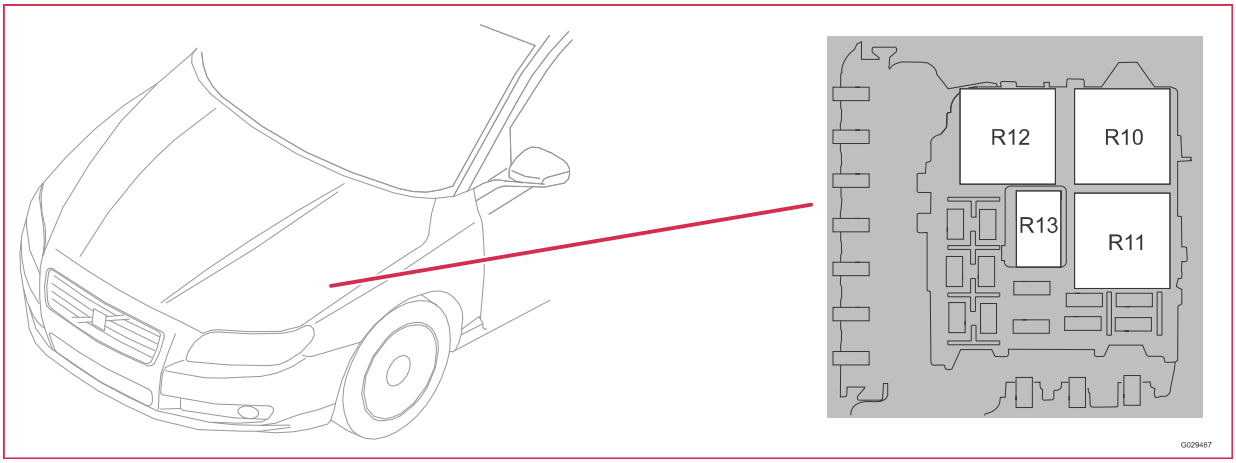

15/31 Distribution box in engine compartment


Pos	Relay function	
R10	2/32	Main relay, engine management system
R11	2/14	Relay, diesel filter heater, Diesel
R12	2/35	Relay, starter motor
R13	2/22	Relay, climate control system

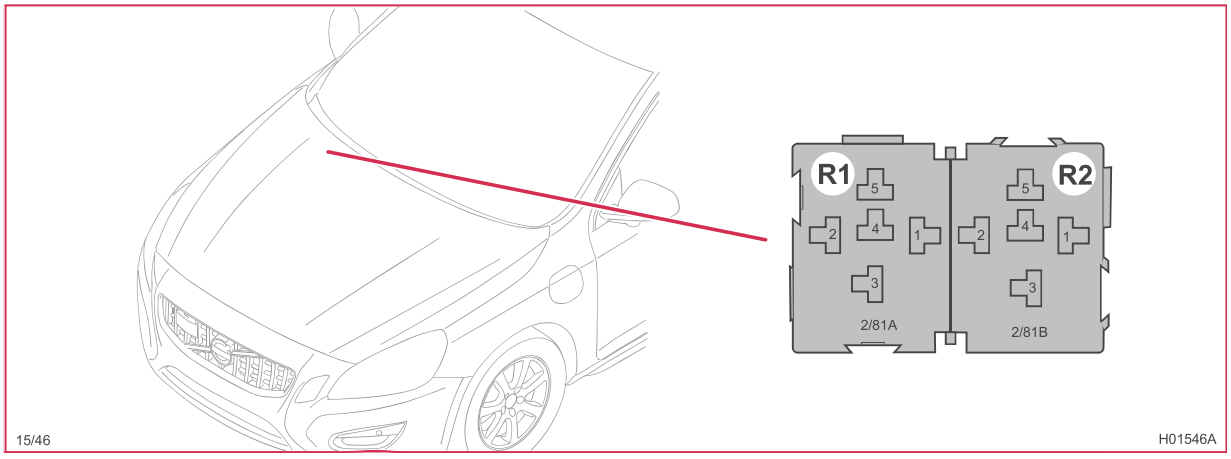

15/46 Relay box in engine compartment


Pos	Relay function	
R1	2/81A	Relay, heated windshield, passenger side
R2	2/81B	Relay, heated windshield, driver’s side

Relays
Relays in passenger and cargo compartments

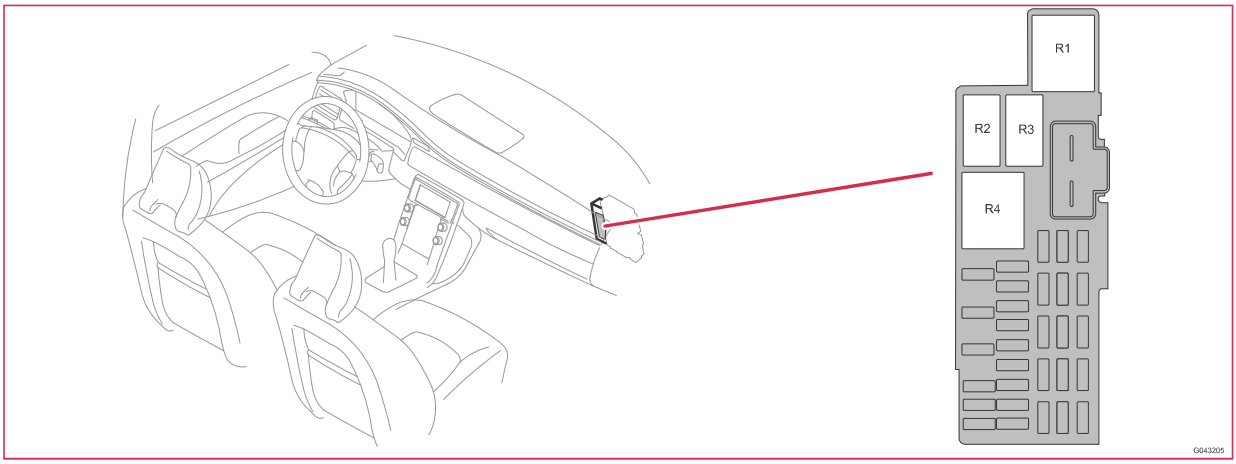

15/36 Distribution box in passenger compartment

Pos	Relay function	
R1	2/88	Relay, 15-feed
R2	2/92	Relay, washer motor windshield
R3	2/93	Relay, washer motor rear window
R4	2/193	Relay, comfort functions

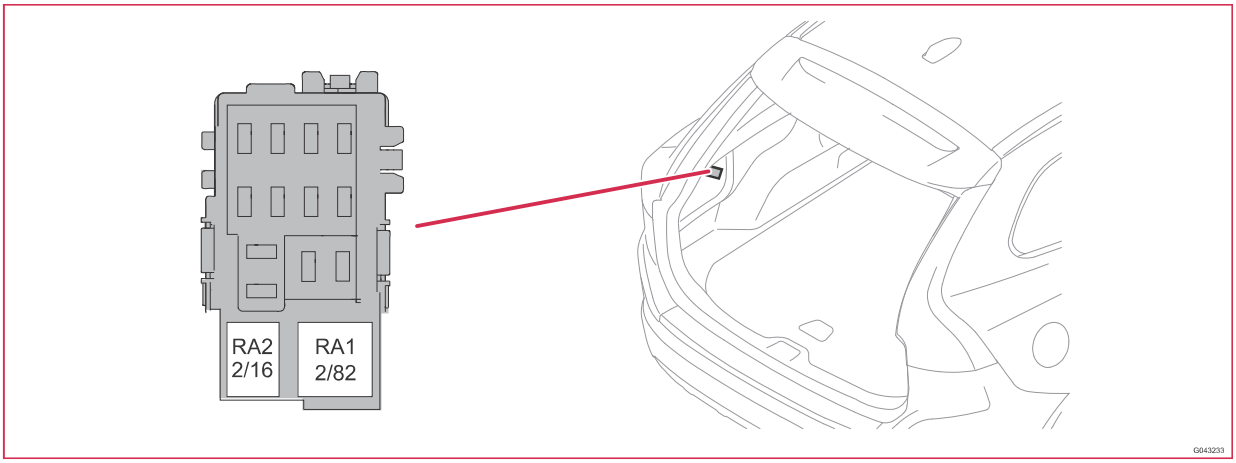

15/32 Distribution box in cargo compartment

Pos	Relay function	
RA1	2/82	Relay, heated rear window
RA2	2/16	Relay, rear window wiper