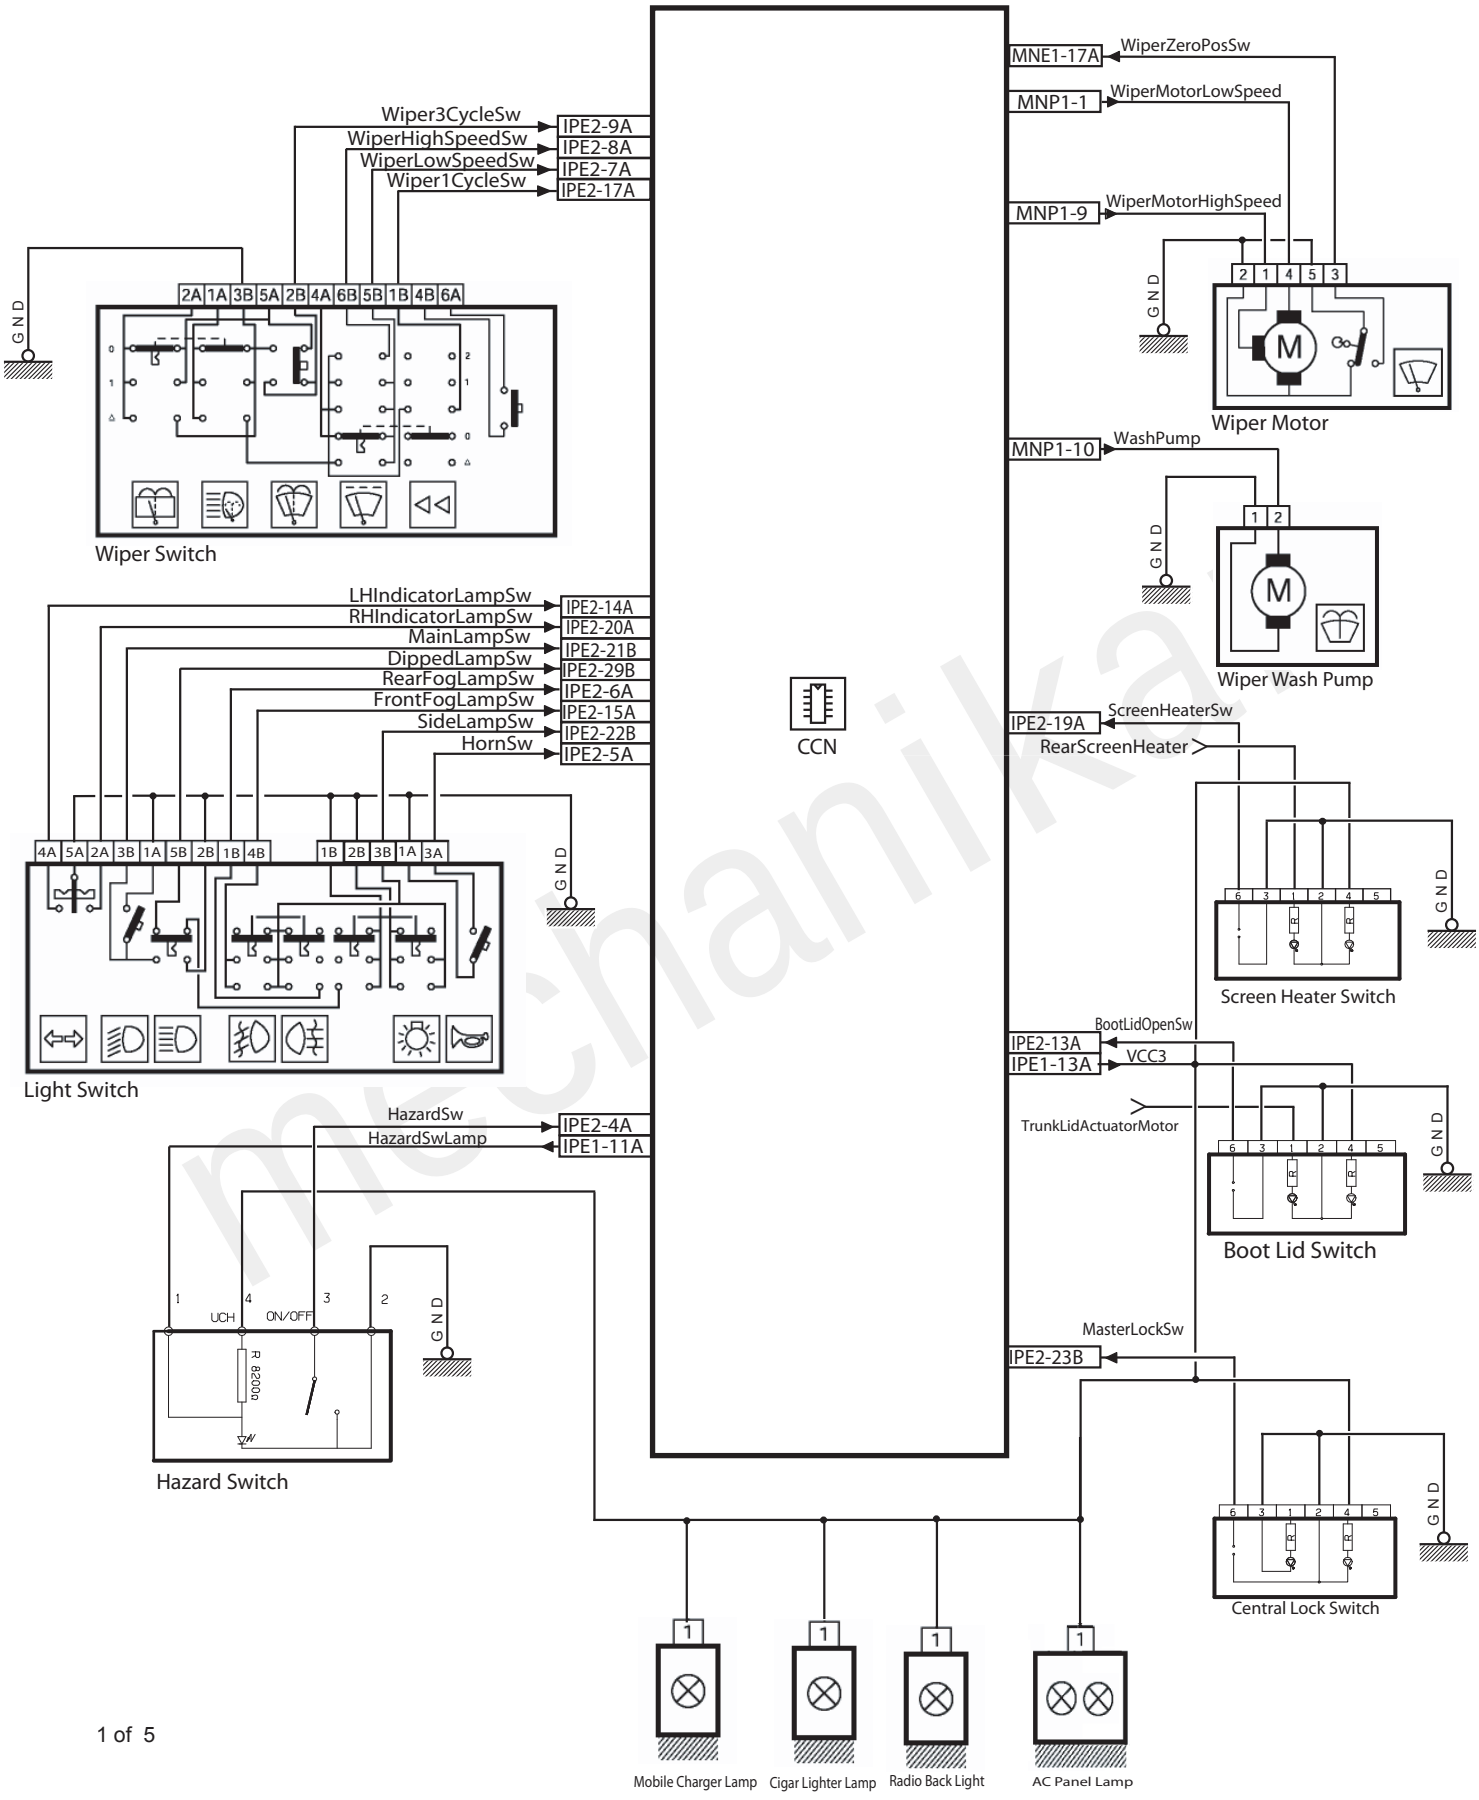
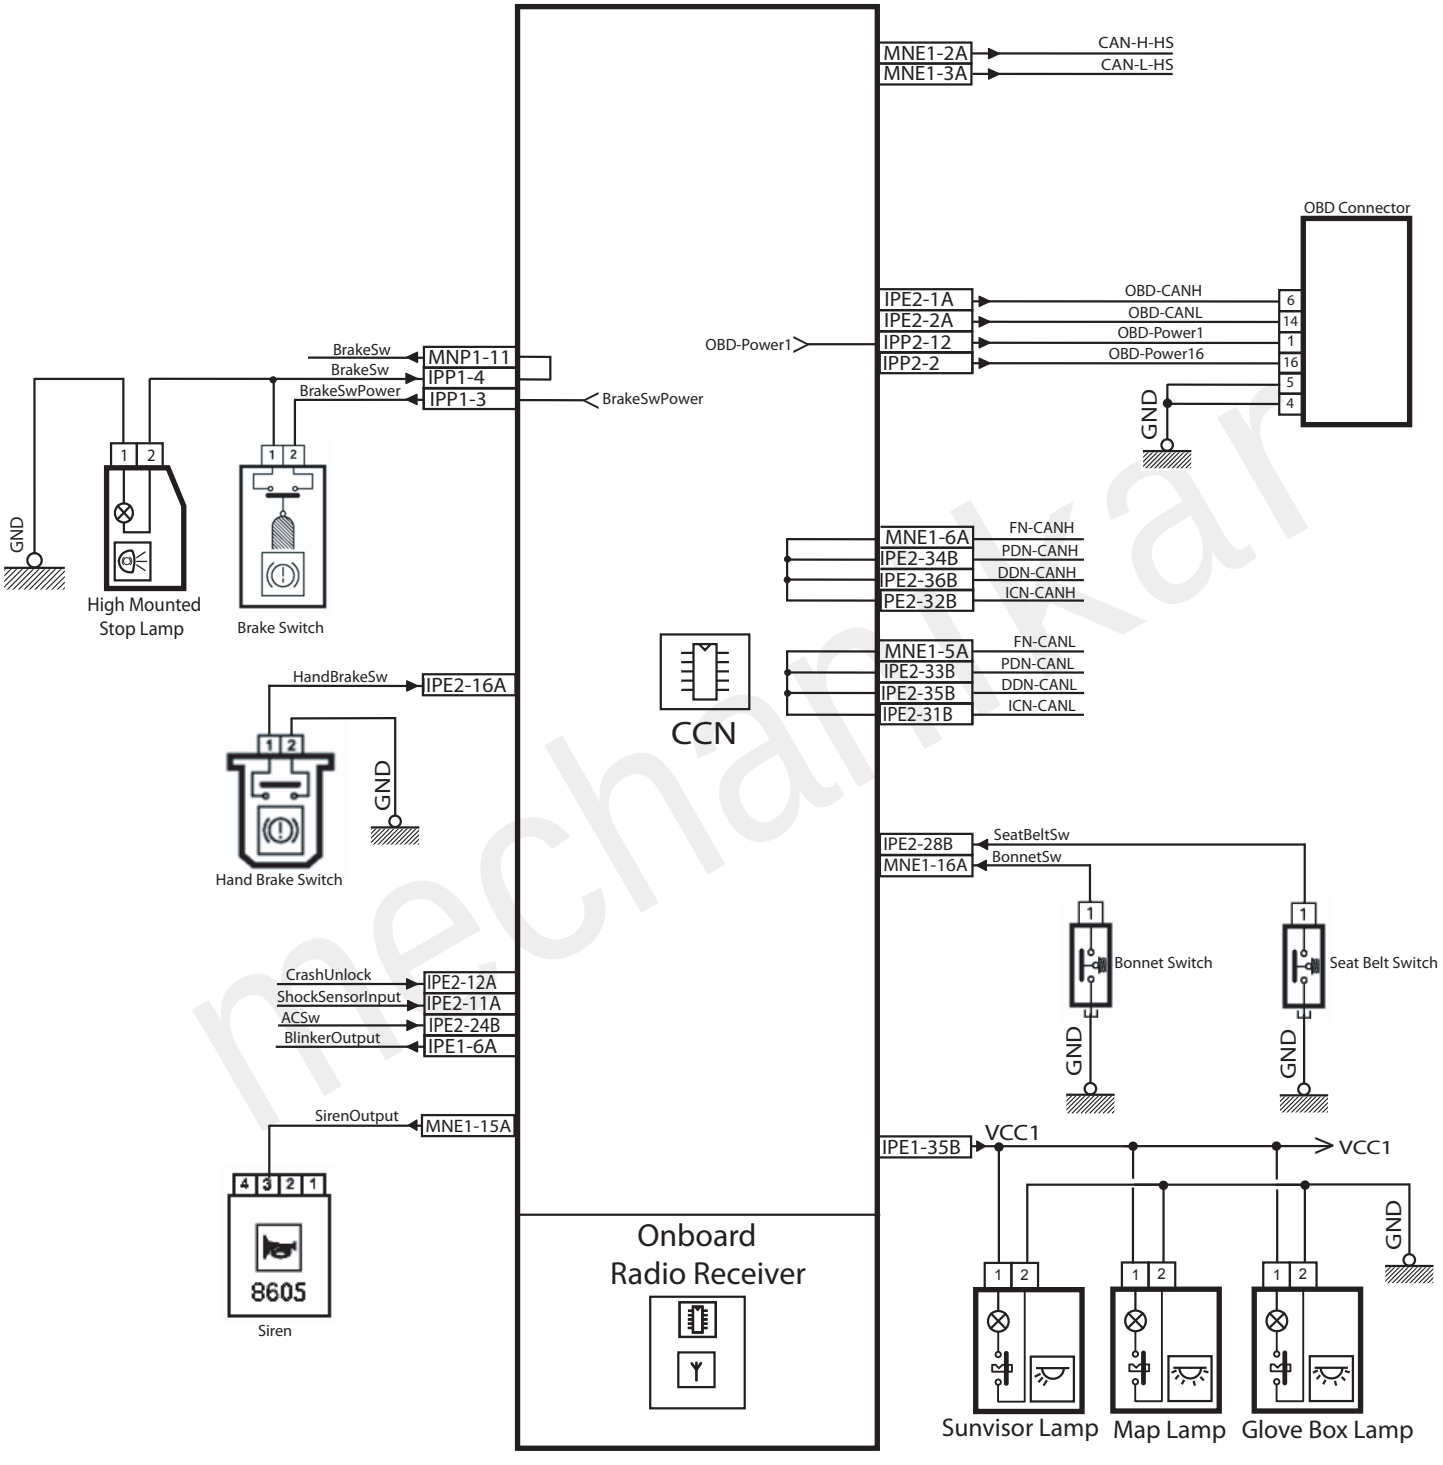
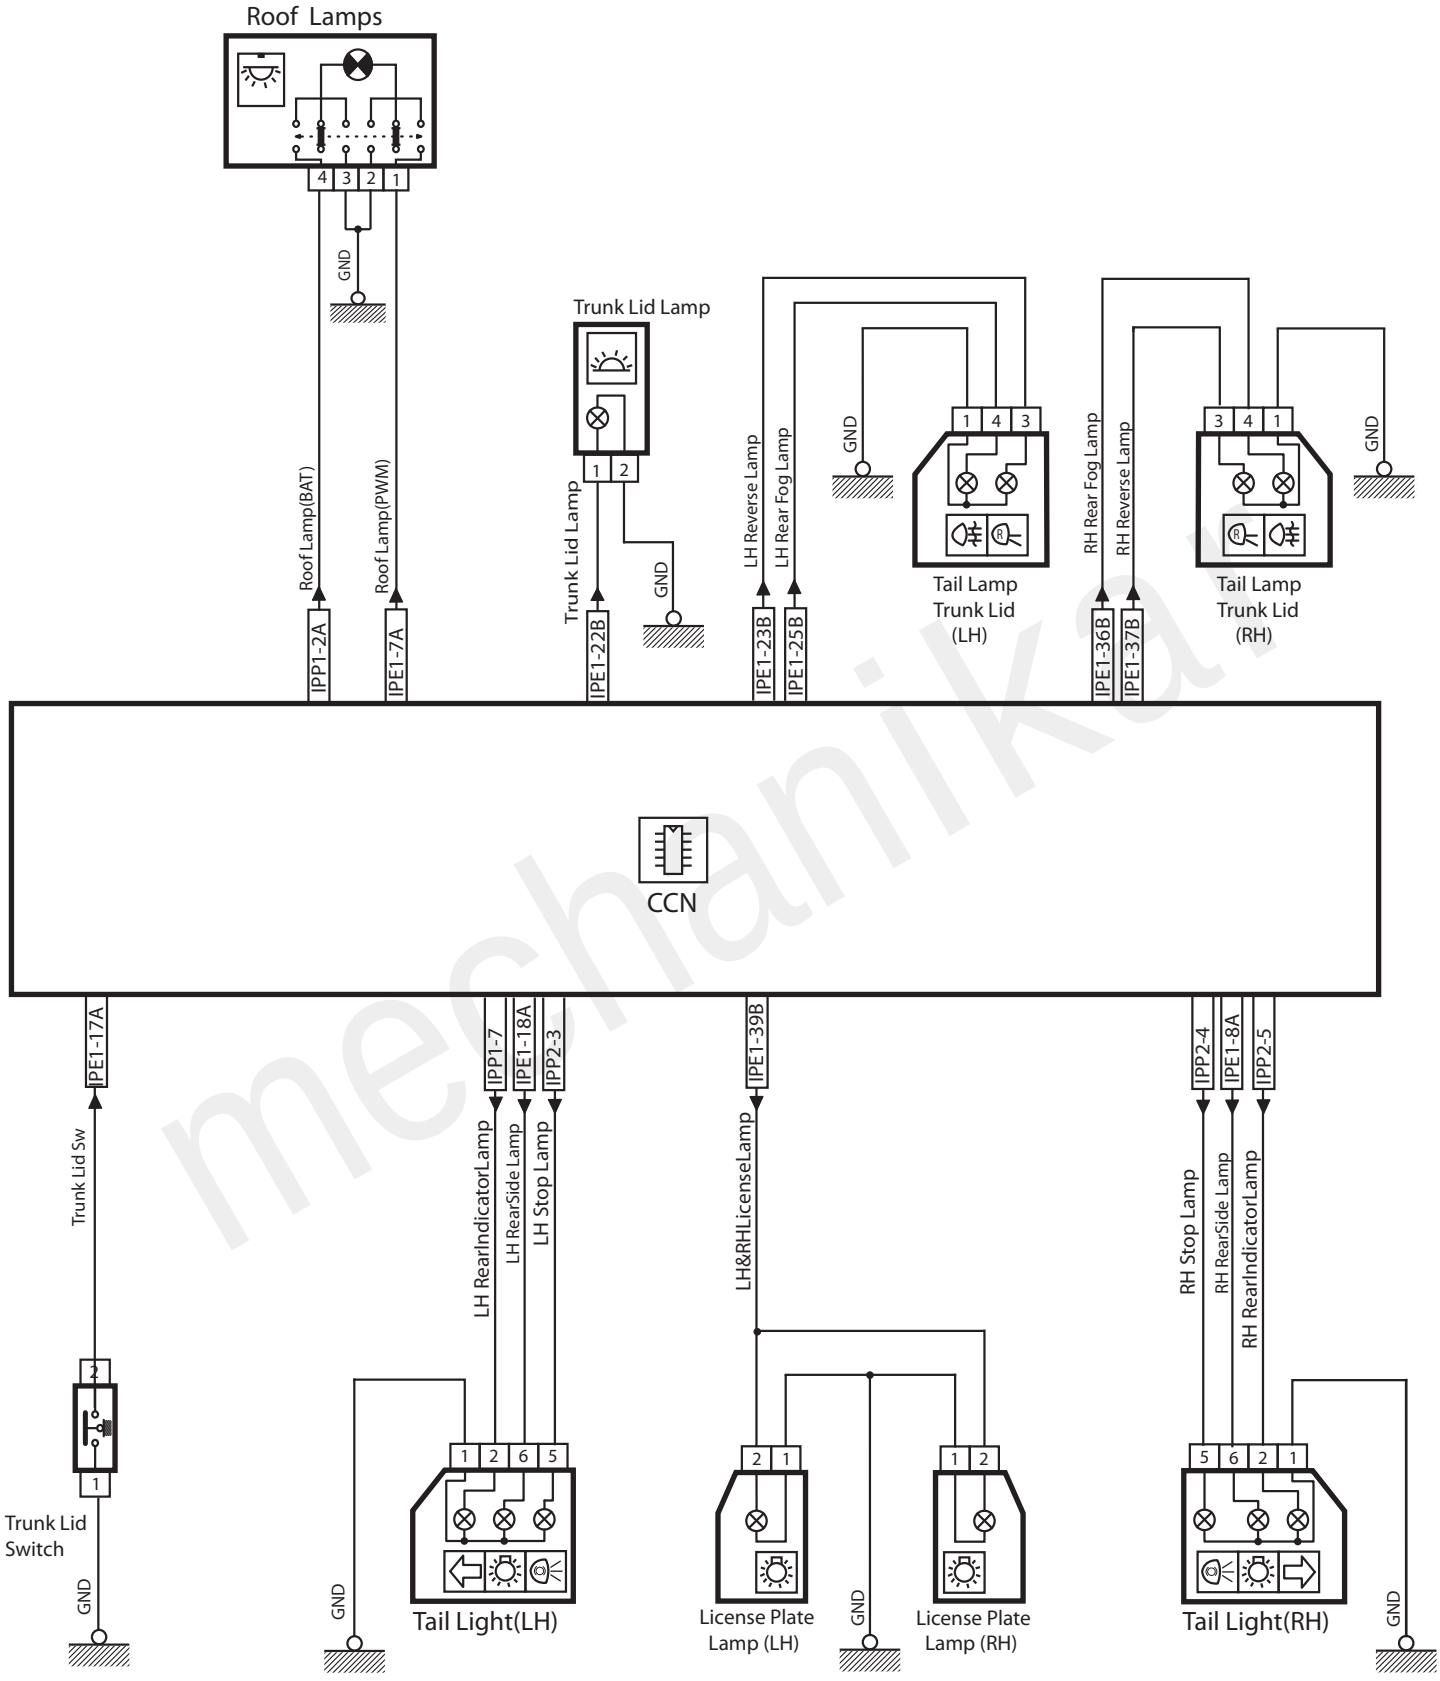

CCN
MNE1-17A
WiperZeroPosSw
MNP1-1
WiperMotorLowSpeed
MNP1-9
WiperMotorHighSpeed
Wiper3CycleSw
WiperHighSpeedSw
WiperLowSpeedSw
Wiper1CycleSw
IPE2-9A
IPE2-8A
IPE2-7A
IPE2-17A
GND
2A 1A 3B 5A 2B 4A 6B 5B 1B 4B 6A
Wiper Switch
Wiper Motor
MNP1-10
WashPump
Wiper Wash Pump
LHIndicatorLampSw
RHIndicatorLampSw
MainLampSw
DippedLampSw
RearFogLampSw
FrontFogLampSw
SideLampSw
HornSw
IPE2-14A
IPE2-20A
IPE2-21B
IPE2-29B
IPE2-6A
IPE2-15A
IPE2-22B
IPE2-5A
4A 5A 2A 3B 1A 5B 2B 1B 4B
1B 2B 3B 1A 3A
Light Switch
IPE2-19A
ScreenHeaterSw
RearScreenHeater
Screen Heater Switch
BootLidOpenSw
IPE2-13A
IPE1-13A
VCC3
TrunkLidActuatorMotor
Boot Lid Switch
HazardSw
HazardSwLamp
IPE2-4A
IPE1-11A
UCH
ON/OFF
R 8200
Hazard Switch
MasterLockSw
IPE2-23B
Central Lock Switch
Mobile Charger Lamp
Cigar Lighter Lamp
Radio Back Light
AC Panel Lamp

mechanika


MNE1-2A
MNE1-3A
CAN-H-HS
CAN-L-HS
OBD Connector
IPE2-1A
IPE2-2A
IPP2-12
IPP2-2
OBD-CANH
OBD-CANL
OBD-Power1
OBD-Power16
OBD-Power1
GND
BrakeSw
BrakeSw
BrakeSwPower
MNP1-11
IPP1-4
IPP1-3
BrakeSwPower
GND
High Mounted Stop Lamp
Brake Switch
MNE1-6A
IPE2-34B
IPE2-36B
PE2-32B
FN-CANH
PDN-CANH
DDN-CANH
ICN-CANH
MNE1-5A
IPE2-33B
IPE2-35B
IPE2-31B
FN-CANL
PDN-CANL
DDN-CANL
ICN-CANL
CCN
HandBrakeSw
IPE2-16A
GND
Hand Brake Switch
IPE2-28B
MNE1-16A
SeatBeltSw
BonnetSw
Bonnet Switch
Seat Belt Switch
GND
GND
CrashUnlock
ShockSensorInput
ACSw
BlinkerOutput
IPE2-12A
IPE2-11A
IPE2-24B
IPE1-6A
SirenOutput
MNE1-15A
8605
Siren
IPE1-35B
VCC1
VCC1
GND
Onboard
Radio Receiver
Sunvisor Lamp
Map Lamp
Glove Box Lamp

mechanKar

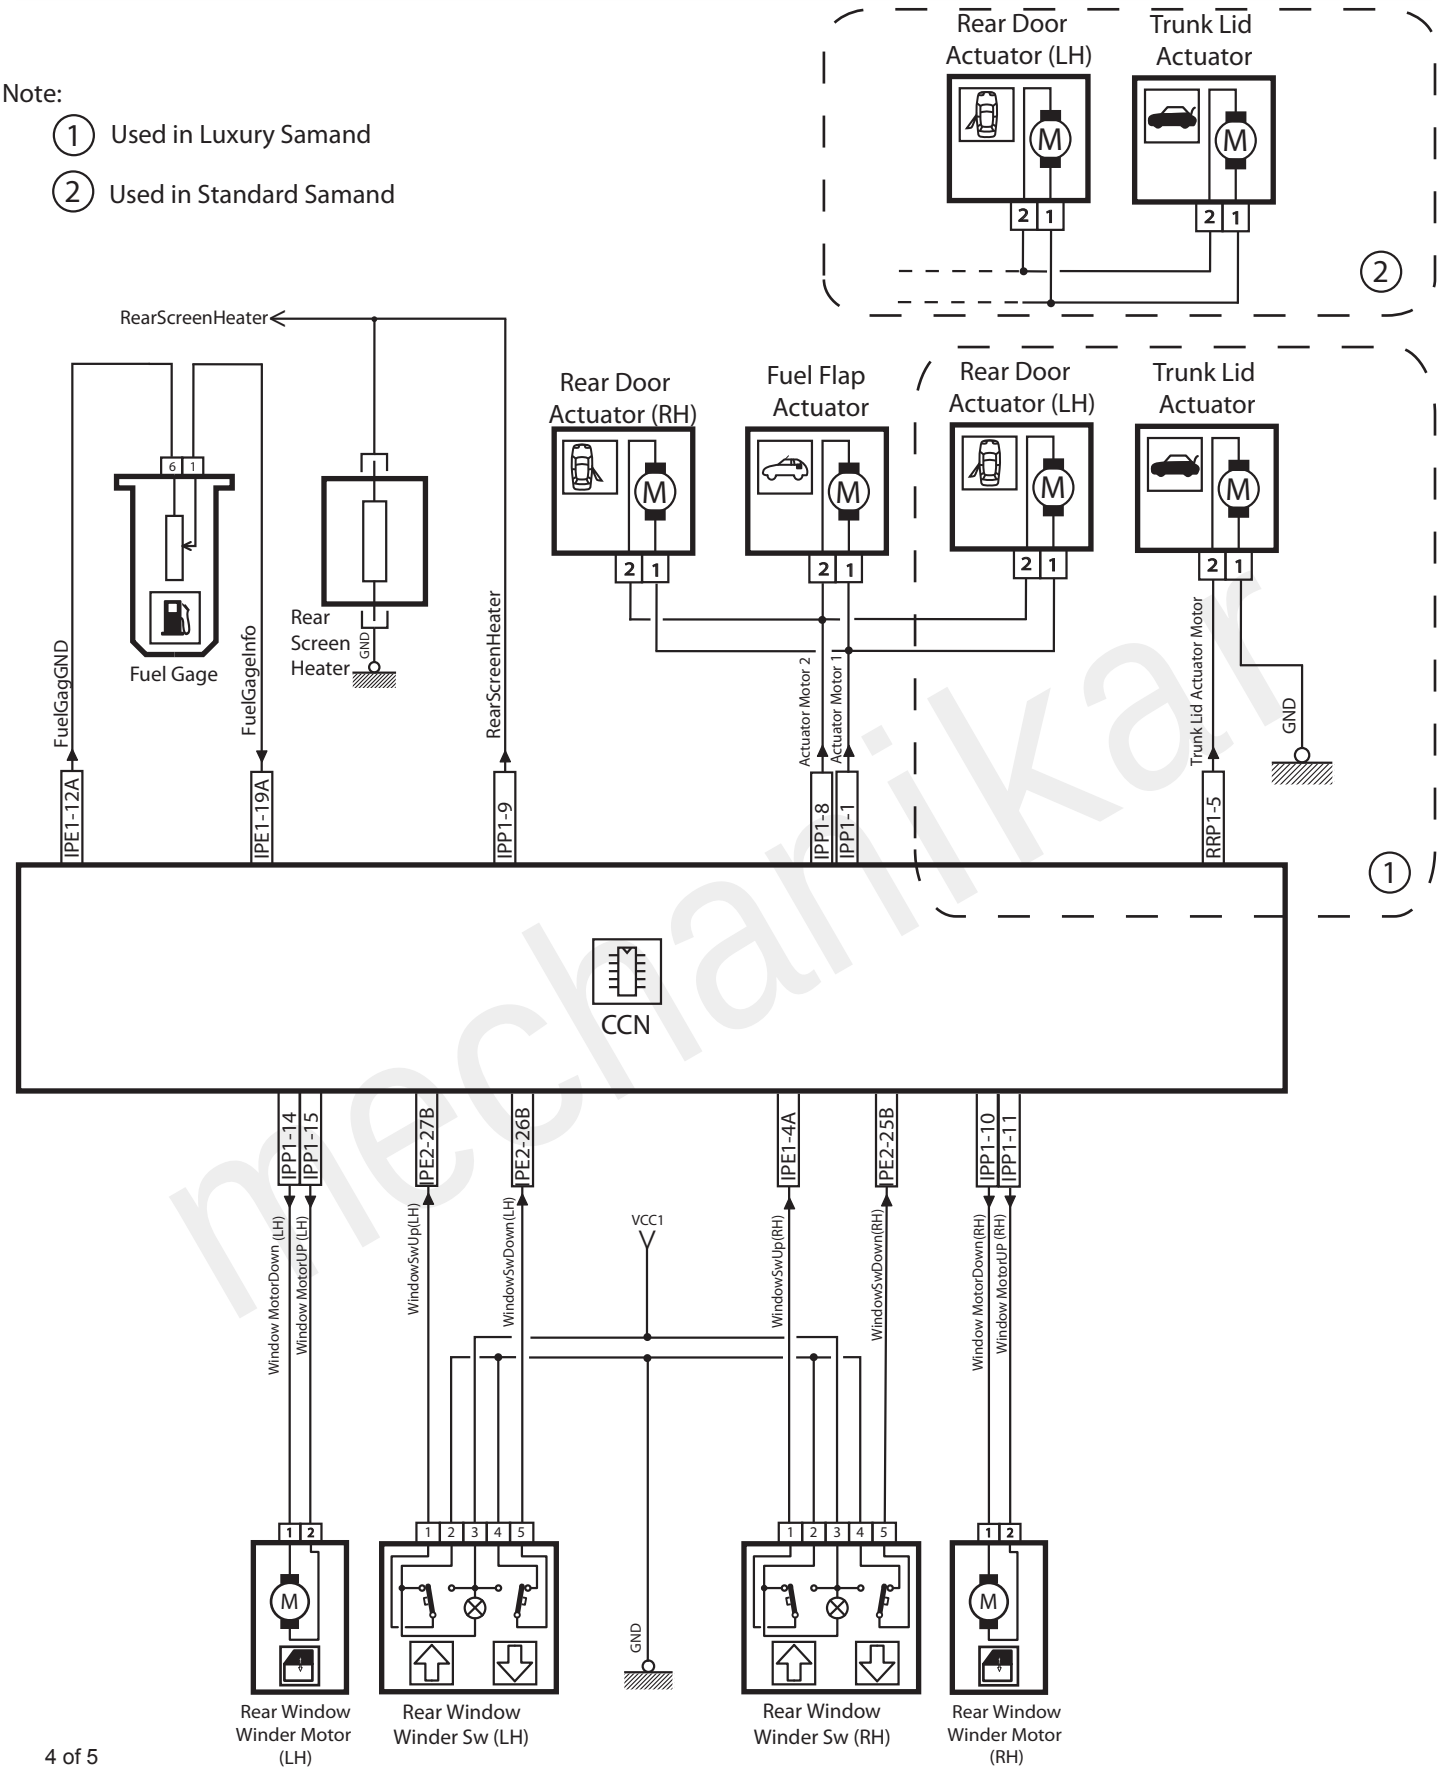

Roof Lamps
4 3 2 1
GND
Roof Lamp(BAT)
Roof Lamp(PWM)
IPP1-2A
IPE1-7A
Trunk Lid Lamp
1 2
Trunk Lid Lamp
GND
IPE1-22B
LH Reverse Lamp
LH Rear Fog Lamp
GND
1 4 3
IPE1-23B
IPE1-25B
Tail Lamp
Trunk Lid
(LH)
RH Rear Fog Lamp
RH Reverse Lamp
3 4 1
GND
IPE1-36B
IPE1-37B
Tail Lamp
Trunk Lid
(RH)
CCN
IPE1-17A
Trunk Lid Sw
2
1
Trunk Lid
Switch
GND
IPP1-7
IPE1-18A
IPP2-3
LH RearIndicatorLamp
LH RearSide Lamp
LH Stop Lamp
1 2 6 5
GND
Tail Light(LH)
IPE1-39B
LH&RHLicenseLamp
2 1
GND
License Plate
Lamp (LH)
1 2
License Plate
Lamp (RH)
IPP2-4
IPE1-8A
IPP2-5
RH Stop Lamp
RH RearSide Lamp
RH RearIndicatorLamp
5 6 2 1
GND
Tail Light(RH)

mechanika

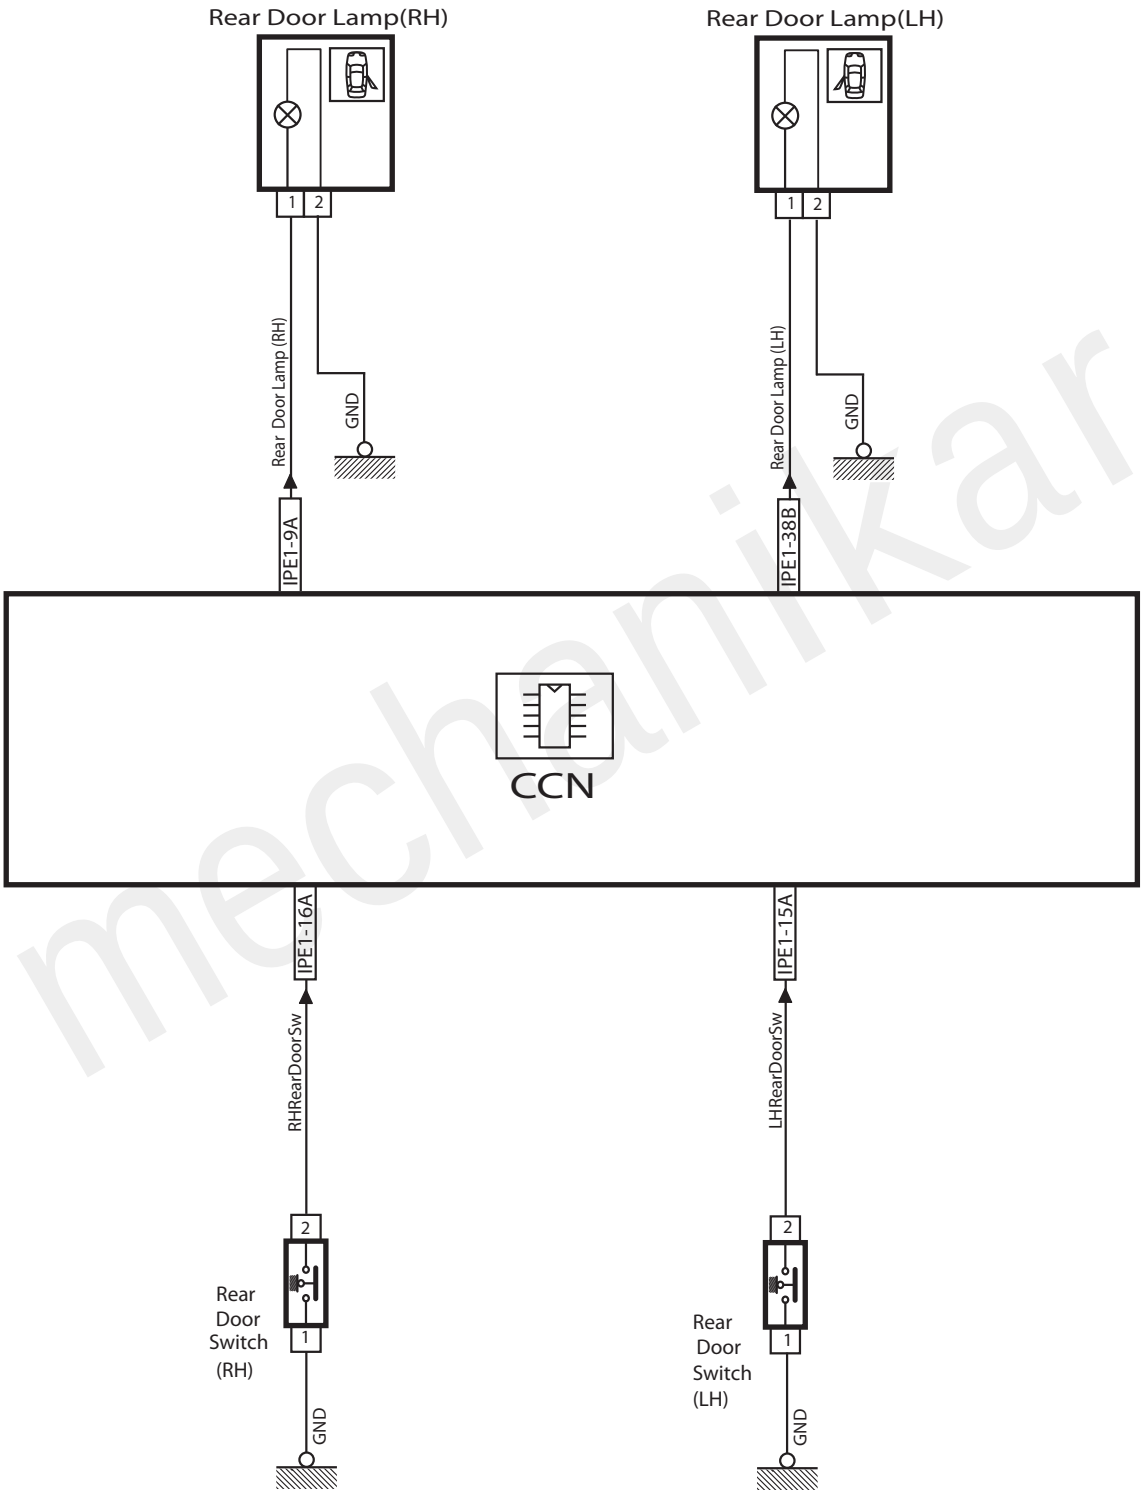
Note:

(1) Used in Luxury Samand

(2) Used in Standard Samand



mechanikar


Rear Door Lamp(RH)
Rear Door Lamp(LH)
1
2
Rear Door Lamp (RH)
GND
Rear Door Lamp (LH)
GND
IPE1-9A
IPE1-38B
CCN
IPE1-16A
IPE1-15A
RHRearDoorSw
LHRearDoorSw
2
1
Rear Door Switch (RH)
Rear Door Switch (LH)
GND
GND

mechanikar